

# EASYPAD 1000

for Android™



## User Guide

# EASYPAD 1000

---

**Congratulations on your new EasyPad 1000.  
Please follow the instructions in this manual  
carefully.**

**Statement:** If the final version of this product has any differences from the description of the user guide, please subject to the final product, as we are eager to provide you the newest software updates. Thank you!

# EASYPAD 1000

---

## **Contents List:**

1. 10 Inch Touch Digital Touch Screen Easypad
2. Protective bag
3. Ethernet adapter
4. Power Adaptor
5. Instruction Manual

# EASYPAD 1000

---

## Safety Precautions

1. Always disconnect the device from the power adaptor before cleaning.  
Wipe the touch screen using only a clean cellulose sponge or chamois cloth.  
Do not use chemicals or abrasive cleaning agents.
2. DO NOT leave the device on your lap or any part of the body for prolonged periods of time as the unit may become warm during use.
3. DO NOT use excessive force on the touch screen and do not use devices that may cause damage to the screen.
4. DO NOT expose to strong magnetic or electrical fields.
5. DO NOT expose to or use near liquids, rain, or excessive moisture.
6. SAFE TEMP: This device should only be used in environments with ambient temperatures between 5° and 40°.
7. ONLY USE the power adaptor provided with this device

## Transportation Precautions

When travelling with your EasyPad always switch off the unit and place it into the protective bag provided. If packing your EasyPad along with other items always ensure that it is packed away from anything that could cause damage to it, sharp edges, liquids etc.

## Airplane Precautions

Please refer to specific Airline guidance and instruction before using this device onboard any aircraft.

# EASYPAD 1000

---

## Overview

### Front View



### Right side View:



### Left side View:



### Top View:



# EASYPAD 1000

---

## Getting Started

Charge your Easypad with the power cable for 12 hours before the initial operation.

## Battery Charging

The EasyPad has an internal battery which you can charge with the **Power Adapter**

## Charging the battery

1. Plug in the power adapter, the battery charge indicator turns red, indicating charging. When the battery is fully charged, the indicator shows blue.  
After unplugging the power adapter, the indicator always shows green.
2. You can operate the EasyPad during the battery charging process.

### **Note:**

The charging time will be longer when operating and charging at the same time.

# EASYPAD 1000

---

## Memory Card

### **Insert memory card:**

Insert memory card into the Card slot until it is locked into place.

Upper left corner of the screen will prompt: SD cards ready.

### **Browsing files in memory card:**

Run "OI File manager" program, showing all the files under the root directory.

Select "SD card" open to browse the contents of the card.

Remove memory card:

Close all applications or documents which have been opened with the card.

Press the card lightly. It will be ejected partly. Pull the card out. Upper left corner of the screen will prompt "SD card has been removed".

### **Note:**

1. Insert card in the right position. Otherwise the card will be damaged.
2. Once the card has been locked, it cannot be formatted or written.
3. Don't insert and remove the card repeatedly in a short time.  
It may cause the card to be damaged.
4. We suggest the use of major brands of memory cards in order to avoid any incompatibility.

## **Remove and insert memory card and USB memory stick**

**Please don't remove the memory card and USB memory stick while you are using the files on it.**

For example, when you are viewing files in my photo, my video or my music, removing the memory card or USB memory stick directly may cause its damage and the device may exit automatically for protection. To remove the memory card please refer to "How to use Memory Card". To remove the USB memory stick, please close all applications or documents which have been opened from the USB memory stick.

# EASYPAD 1000

---

## Storage Space

The device has three storage spaces: internal device storage, USB memory stick and memory card. The internal device storage is named “nand”; the memory card is named “SDcard”; and the external USB memory stick is named “Udisk”. The user can use the storage space in the local disk of 2G. The USB memory stick and memory card storage space depends on their specific capacity – the maximum storage space supported is 32G memory.

## Orientation of Display

The system interface switches the screen automatically according to the direction of the device.

## Internet Connection

### Connecting to the internet by Ethernet

Connect the Ethernet adapter to the Ethernet port and then plug the network cable into the Ethernet adapter. In the upper right corner of the screen the Ethernet symbol appears. The Easypad automatically obtains an IP address via DHCP to connect the network.

### Connecting to the internet by Wi-Fi:

1. Click MENU key to pop-up the menu, and then select “Settings”;
2. Select “Wireless Control” in the settings menu;
3. Open Wi-Fi Settings;
4. All wireless networks in the vicinity will be listed, click to select the name you want to connect to wireless networks;
5. If the connection is successful, the wireless network information will be saved in the pop-up window. “Connect” starts to connect, choose “forget” to remove wireless network information.



# EASYPAD 1000

---

6. If the wireless network is not encrypted, select “Connect” to start the connection.
7. If the wireless network is encrypted, enter the password in the pop-up window, and click “Connect” to start the connection.
8. When the internet connections are successful, the wireless connection icon in the status bar appears.

## Input operation

### Keyboard

When you need to enter text and numbers using the program or file, the touch screen keyboard will appear automatically.

**Note:**

This device supports an external USB keyboard, but when using an external USB keyboard, some keys may not work properly.

### Touch Screen

The touch Screen senses the finger trajectory.

**Note:**

Please do not place objects on the touch screen surface to avoid its damage

**Long press:**

By touching an icon for a few seconds you can select the file option












**Drag and Drop:**

With drag & drop you can switch between the five desktops.

# EASYPAD 1000

---


## On-Screen Icon Guide

	New Message		Upload/ Download
	New Instant Messaging		Download Complete
	Play Music		WiFi service is connected, the network is available
	Flight mode		Charging
	General Notice		Silent Mode
	More		Alarm Clock Open

# EASYPAD 1000

---

## Basic Settings

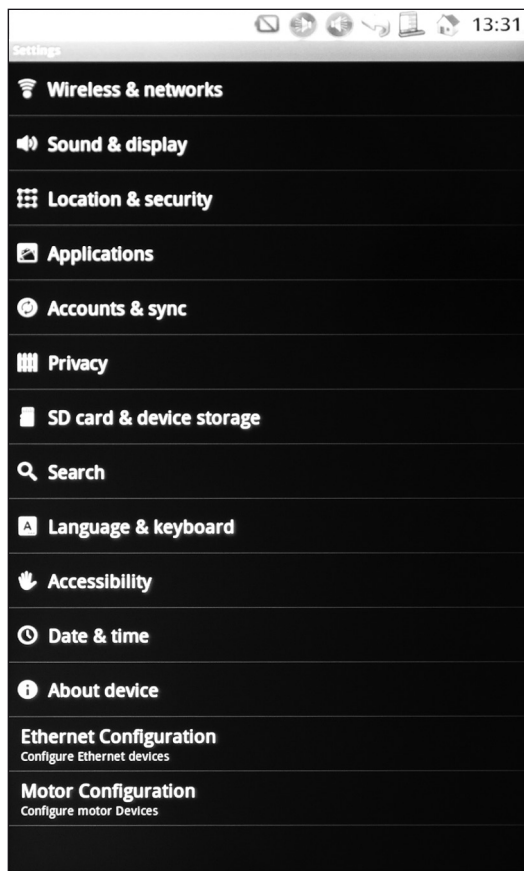

# EASYPAD 1000

---

## Basic Settings

### Internet Connection

#### Wi-Fi Settings

1. In the home desktop, press the “menu” button for the popup menu.
2. Click “Settings”.
3. Click “Wireless controls”
4. Click “Turn on Wi-Fi” .
5. Click “Wi-Fi Settings”.

The device will automatically scan for available Wi-Fi wireless networks.

6. Select the desired Wi-Fi network to connect. For encryption, a password window will pop up, enter the appropriate password.
7. Click “connect”.

# EASYPAD 1000

---

## Basic Settings

### Sound and Display

#### Media Volume Setting

1. In the home desktop, press the “menu” button for the popup menu.
2. Click Settings.
3. Click on sound and display.
4. Click on the media volume to adjust the volume of music and video.
5. Bring up the volume settings panel, drag the progress bar to increase or decrease the volume.

#### Adjust Screen Brightness

1. In the home desktop, press the “menu” button for the popup menu.
2. Click Settings.
3. Click on sound and display.
4. Scroll down the screen, click on brightness.
5. The brightness panel will appear on screen.
6. Adjust brightness by sliding between darker and brighter until desired level is achieved.
7. Click OK.

#### Adjust the Screen Timeout

1. In the home desktop, press the “menu” button for the popup menu.
2. Click Settings.
3. Click on the sound and display.
4. Scroll down the screen, then click on “Screen timeout”.
5. Select the shutdown time.

# EASYPAD 1000

---

## Basic Settings

### Unlock

When not working for a while on your Easypad, it will automatically go into LOCK Mode. For unlocking your pad please click the lock button of the right hand side of the screen and move upward till the middle.

### Restore factory settings

If your device encounters a serious error or you forget your unlock password, you can reset your device back to the original factory settings. Restore factory settings means the deletion of downloaded applications and other user settings, so all data will be lost. Remember to back up your data.

1. In the home desktop, press the “menu” button for the popup menu.
2. Click Settings.
3. Click to restore factory settings
4. The system will enter the erase data function.

The screen will be blank and the display black.

After all data is deleted the system will automatically reboot.

# EASYPAD 1000

---

## Basic Settings

### Date and Time

The system will automatically use the network to provide the date, time zone and time.

#### **Note:**

If you use the automatic function to set the time and date, you cannot set your own date, time and time zone.

### Adjusting the Time and Date

1. In the home desktop, press the “menu” button for the popup menu.
2. Click Settings.
3. Scroll down the screen, then click on the date and time settings.
4. Clear the Automatic check box.
5. Click the choose time zone, and then select the list of time zones.  
Scroll down the list to see more time area, then click on Settings
6. Click to set the time. Then click the up or down buttons to adjust the hours and minutes. Select AM or PM to change the morning or afternoon.  
Click set to complete.
7. Select the check box to use 24-hour format.
8. Click Select a date format

### Set language

1. In the home desktop, press the “menu” button for the popup menu.
2. Click Settings.
3. Click on the region and text.
4. Click Select, and select the language you require.  
Scroll down the list to see more languages.

# EASYPAD 1000

---

## Troubleshooting

### **Device cannot connect to a selected WIFI Network**

1. Ensure your wireless router is turned on and working.
2. Ensure the device and the wireless router are within a valid distance, and there are no walls or other obstructions between them.
3. Ensure your user name and password are correct

### **System freezes and doesn't work correctly after installation of applications**

Installation of some applications may cause the system not to work correctly. You can press the reset button (next to power port) to reset the system.

### **Unable to set up E-Mail Account**

1. Ensure that the network is connected and that you can connect to the Internet.
2. Ensure your E-mail settings and passwords are correct.
3. Make sure your system time and local time are consistent.

The crossed out wheel bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for re-cycling.

Open Source Code:

[http://www.easypix.info/download/easypad1000/zt\\_source\\_code.zip](http://www.easypix.info/download/easypad1000/zt_source_code.zip)

GNU General Public License:

<http://www.gnu.org/licenses/gpl-2.0.html>



# EASYPAD 1000

---

easypix®  
Keep it real.